



78-1307-250
12/13



4-6-2 Pacific/4-6-4 Hudson Steam Locomotive Owner's Manual

Locomotive operation and maintenance

Adjusting the volume using the LionChief remote

To turn off the locomotive's steam background sounds, slide the SOUND switch to the OFF position. Refer to Figure 1 on page 5 for the location of this switch. You must cycle the power off and on for this change to take effect, regardless of the operational mode.

The overall volume of the sounds in your locomotive can be adjusted, but this requires the use of the LionChief remote (in remote operation mode). To enter Volume Control Mode, place the remote on a flat surface. Using one hand, press the WHISTLE **and** BELL buttons simultaneously. After three seconds, the remote's red LED will begin to flash, acknowledging that you are in volume adjustment mode. Keep the WHISTLE and BELL buttons depressed.

Using your other hand turn the speed control knob up or down to adjust the volume to your preference. Release the WHISTLE and BELL buttons to exit volume adjustment mode.