

Figure 1

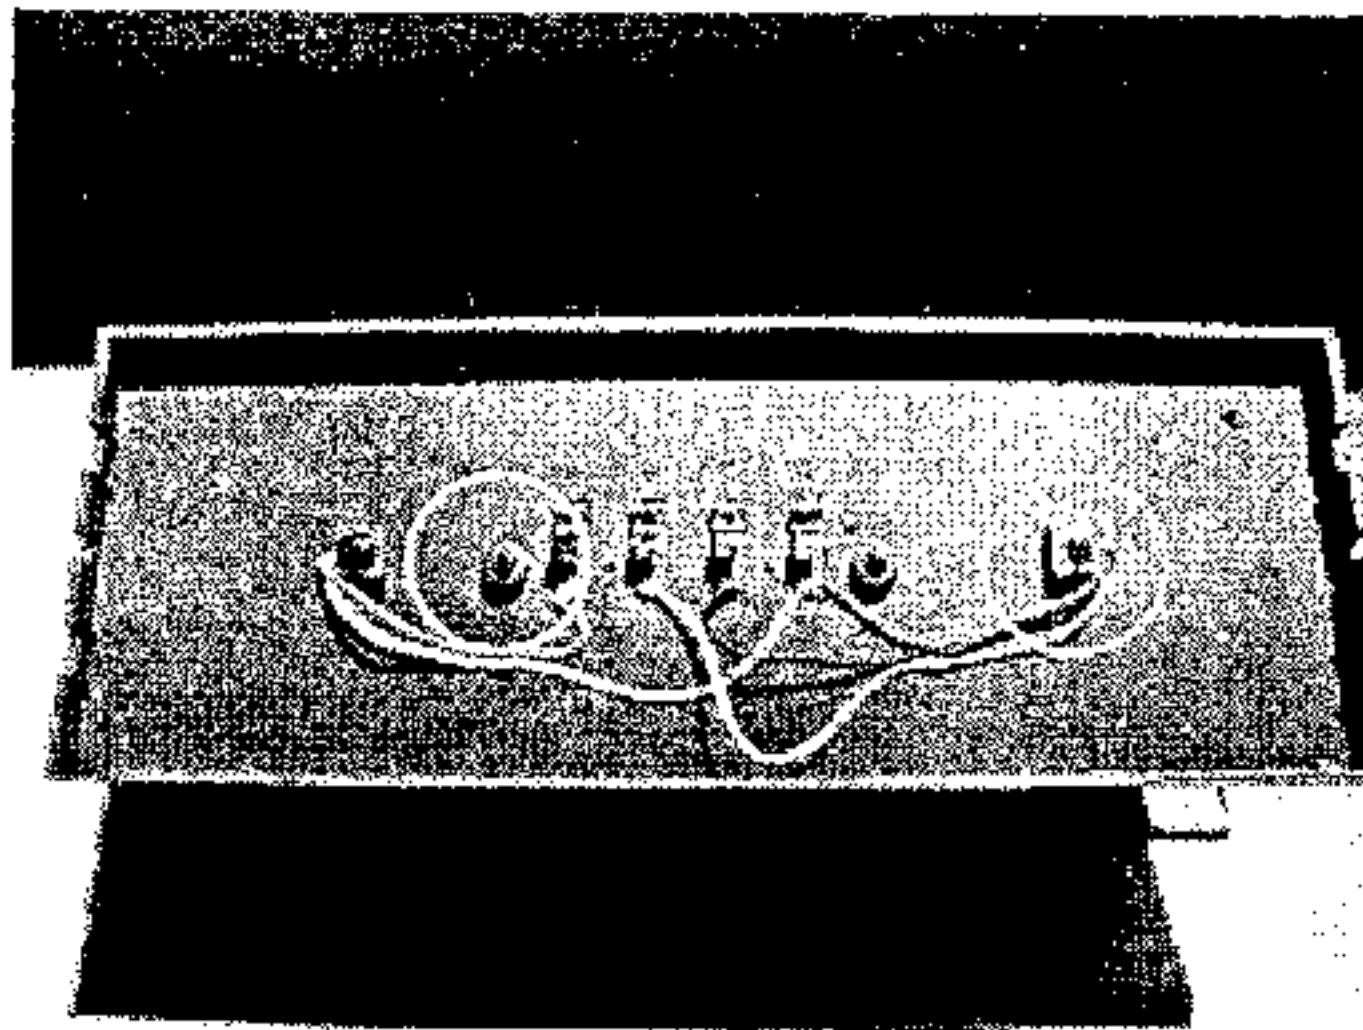


Figure 2



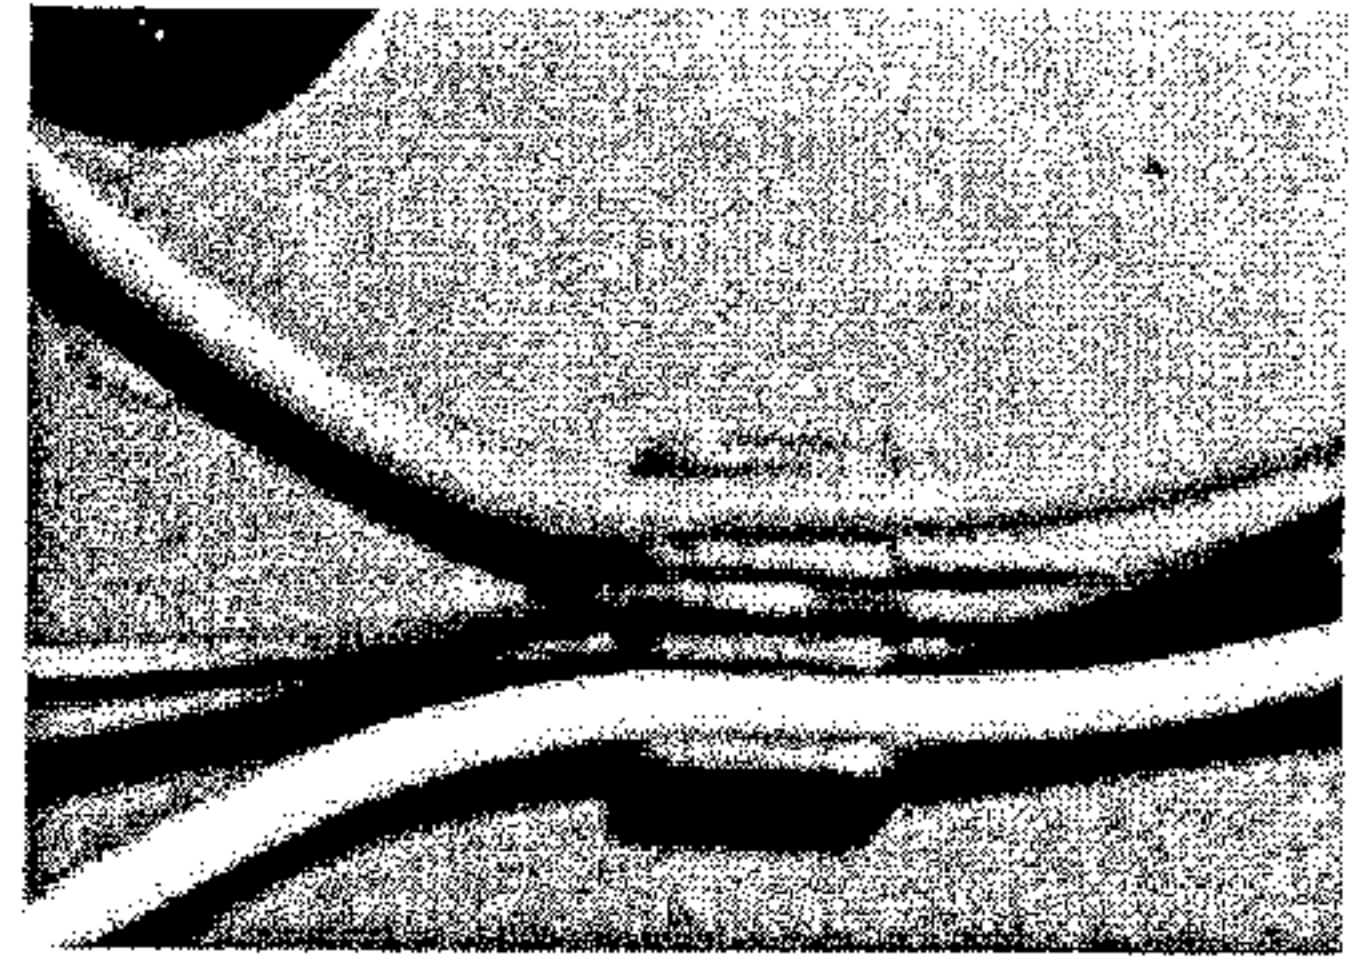


Figure 3

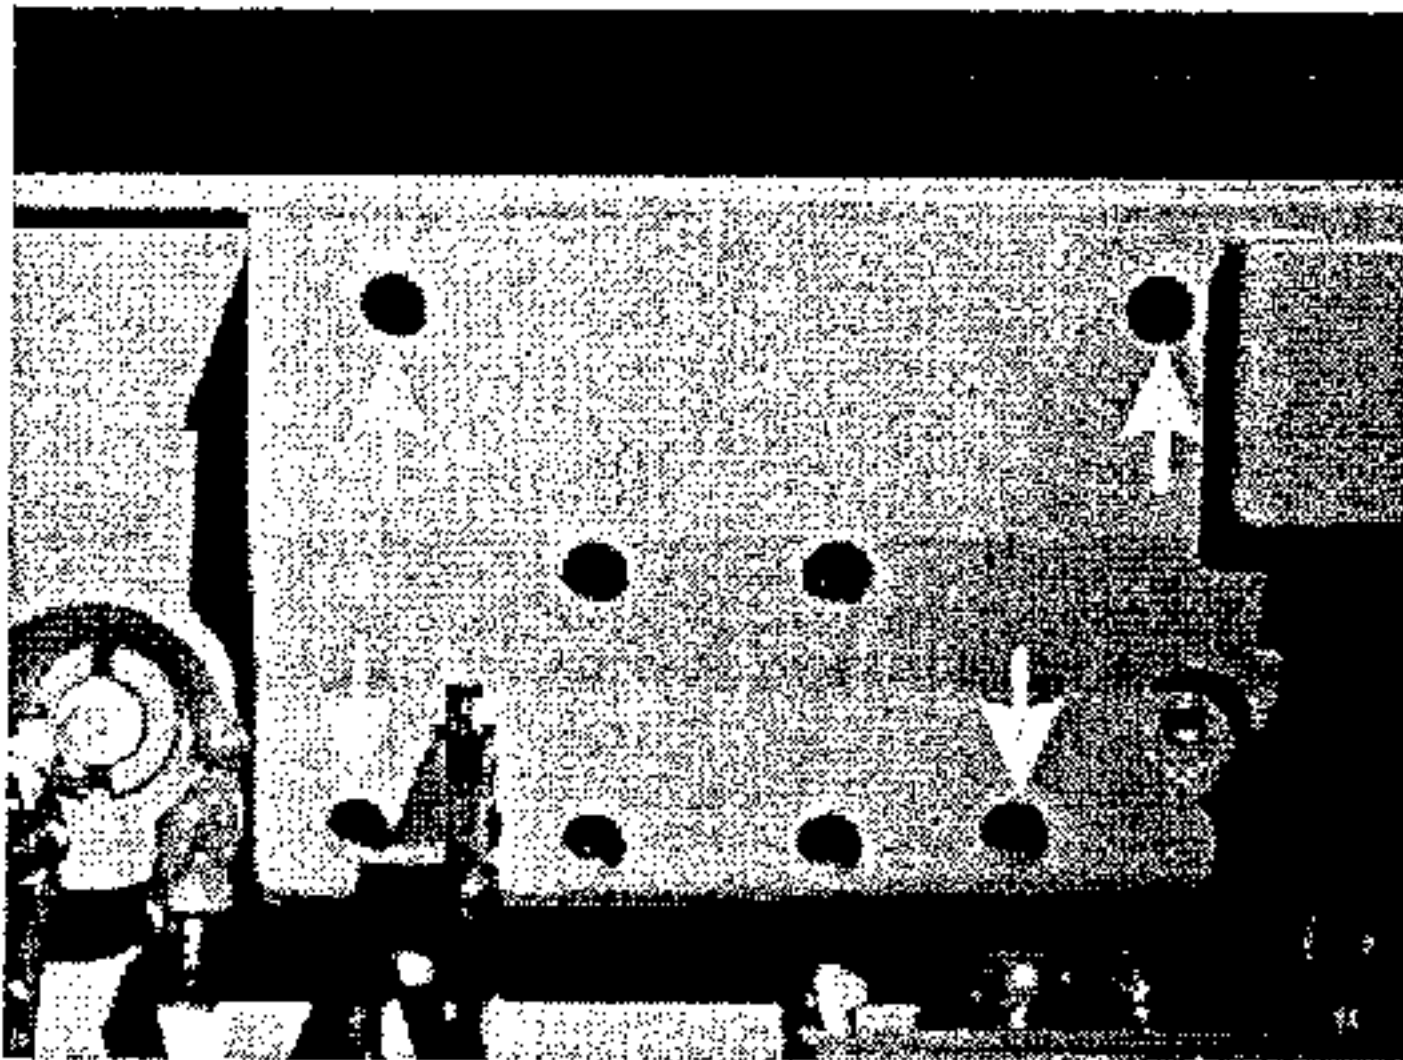


Remove the four corner screws to separate the control box from the roof. Do not remove the four center screws, these are the solenoid mounting screws.

Figure 4

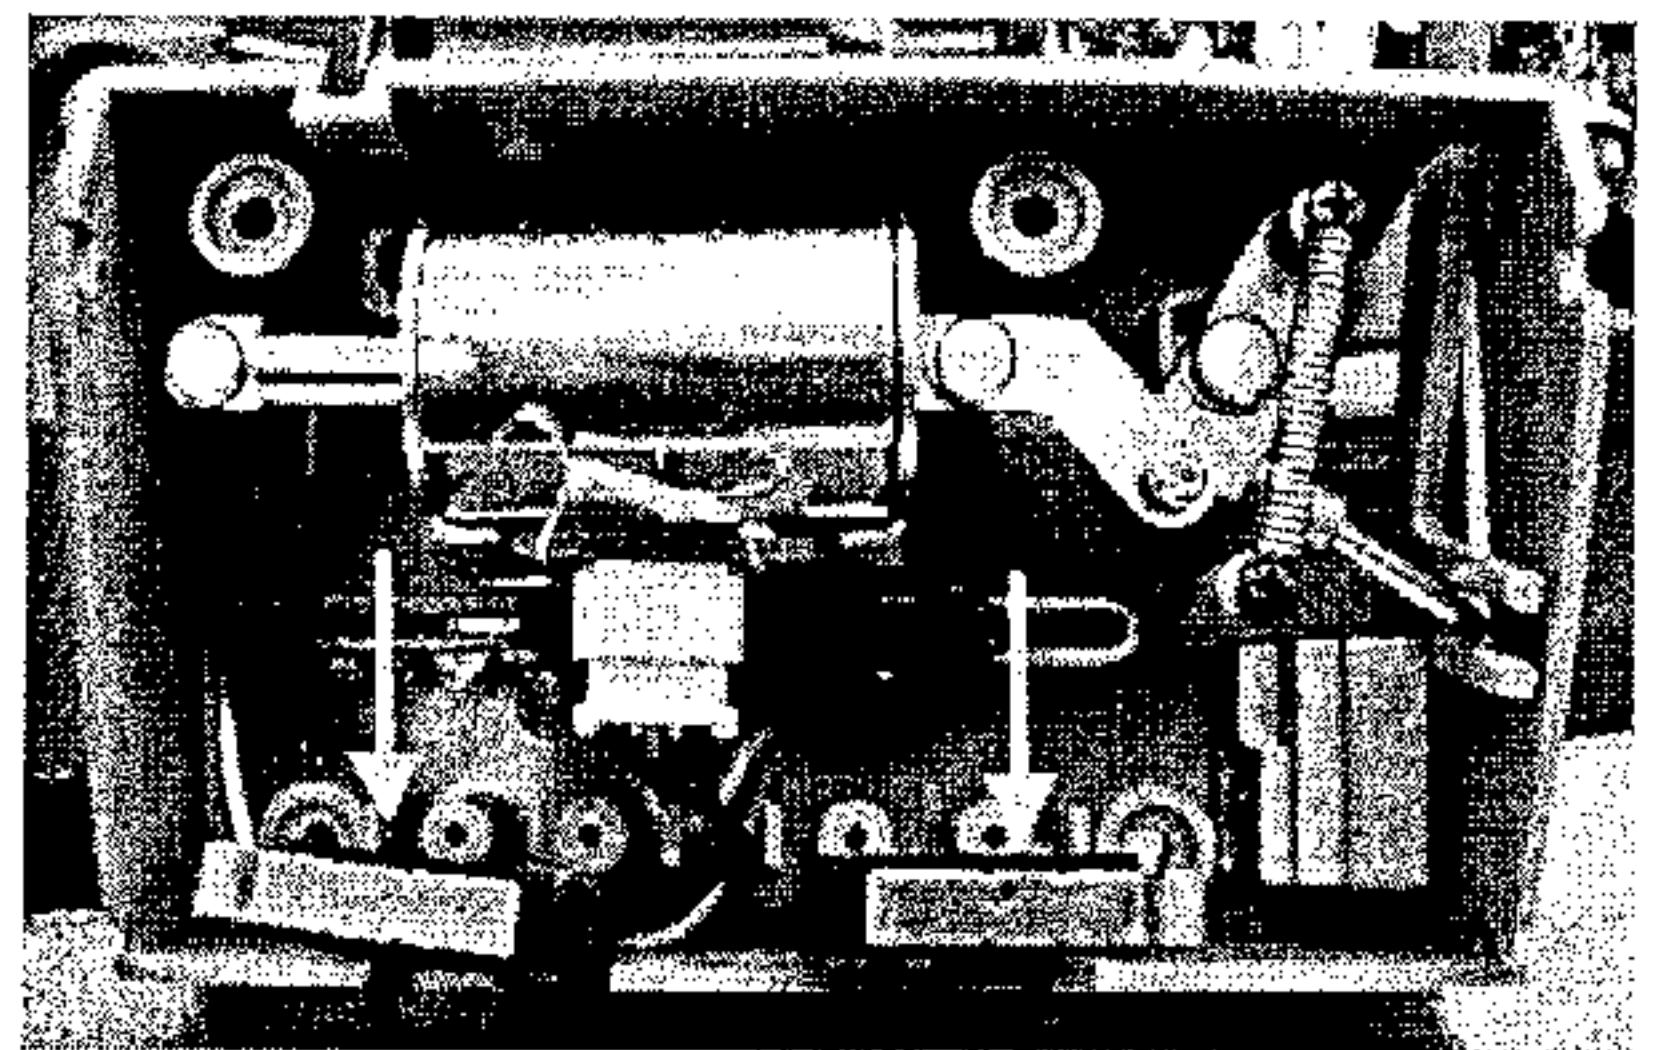

Remove the two original switch and replace with modified switch.

Figure 5

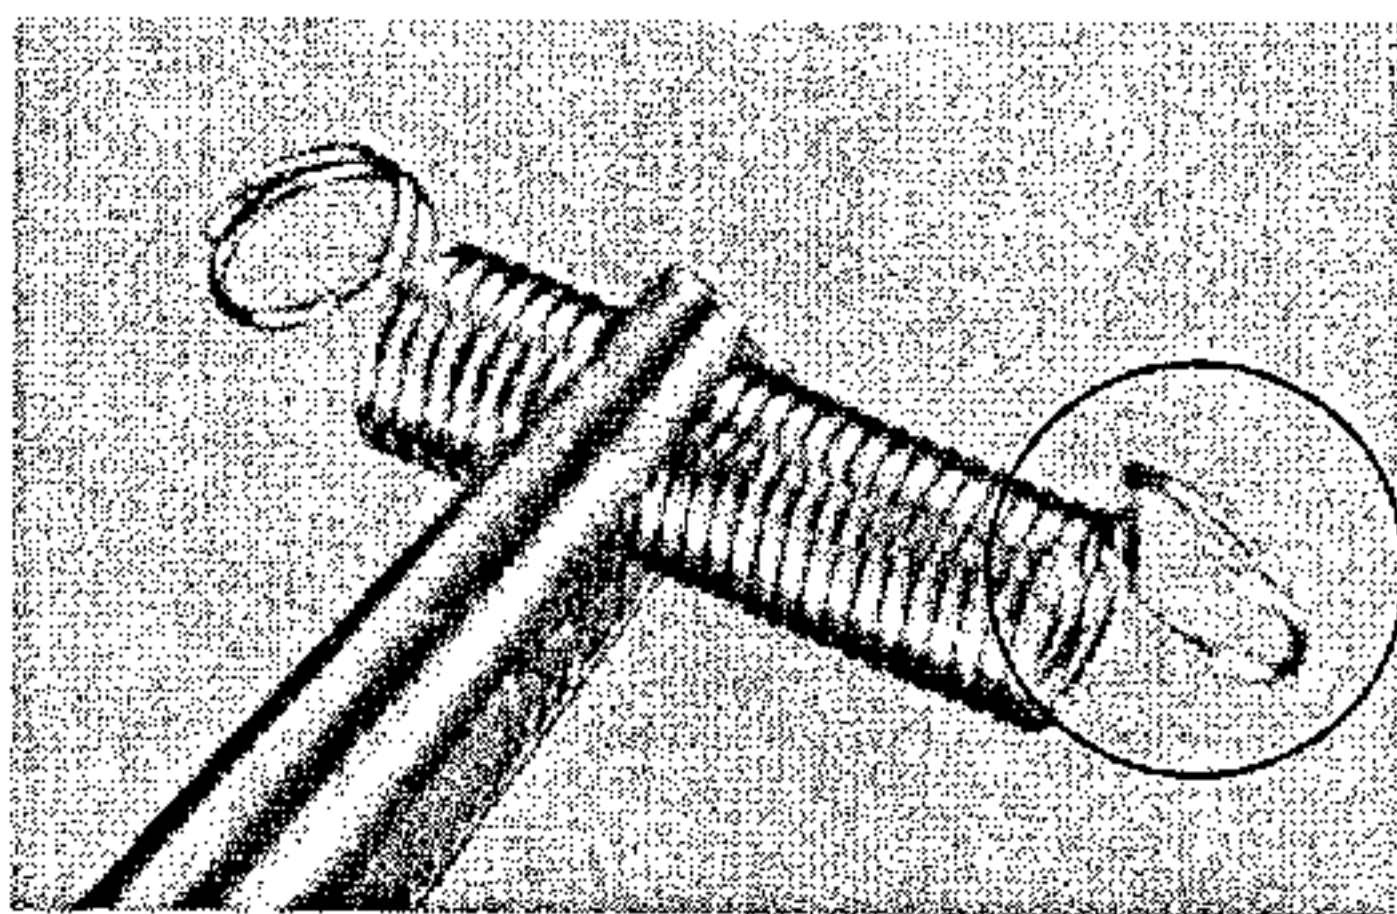

With a small flat screwdriver spread open the end of the spring as shown. With the spring end spread open, the spring adjuster will be easier to install onto the spring

Figure 6

Position the spring on spring adjuster exactly as shown. Note the spring hook is on the left side of the spring and the spring is installed in middle hole of the spring adjuster

