


LIONEL SERVICE MANUAL

OTTP.95

TOP PLATE SCREW
4-40 X 1/4 R.H.

GROUND SPRING
2367-52

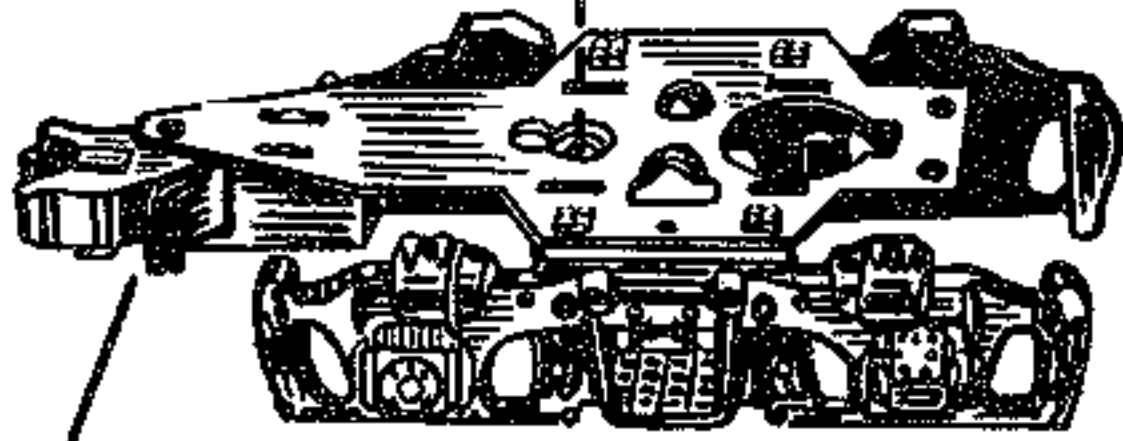


REAR TOP PLATE ASSEMBLY
2243-85

FRONT TOP PLATE ASSEMBLY
2363-85 BLACK
2383-85 SILVER

COUPLER CENTERING PLUNGER
2321-164

Centering Plunger
made of metal is
no longer available.

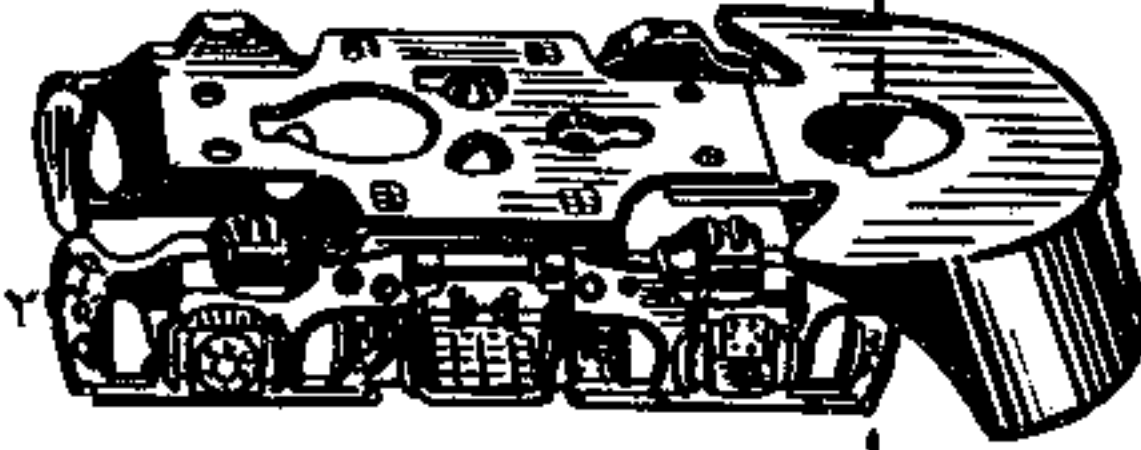

COUPLER HEAD ASSEMBLY
2321-86

COUPLER ARMATURE
2321-168

CENTERING SPRING
1615-93

THRUST WASHER
671M-23

RETAINING WASHER
671M-22

FIXED COUPLER
2243-90


REAR COUPLER CENTERING
SPRING 2243-190

COUPLER BRACKET
2243-91

NYLON BUSHING
2328-80

DRIVE GEAR AND SHAFT
2328-78

BASIC
POWER TRUCK MAGNETIZED
2383-18

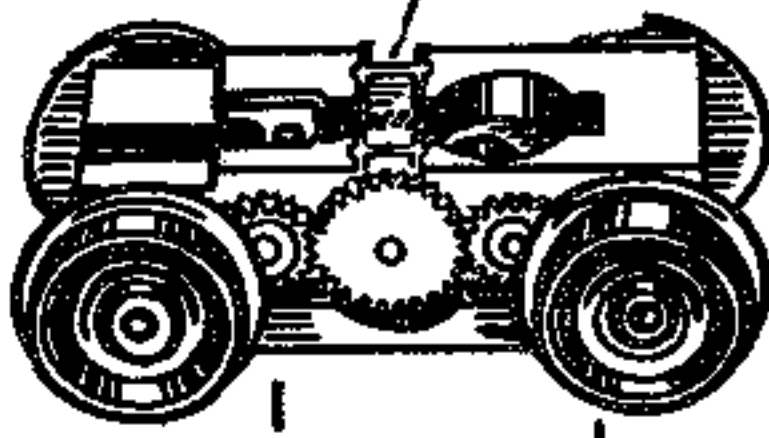

MOTOR MTG. SCREW
6-32 X 1/2 R.H.

COLLECTOR &
INSULATION ASSY.
2383-16

COLLECTOR INSULATION
2367-93

COLLECTOR ASSY.
NOT SOLD SEPARATELY

INSULATING WASHER
2401-19

COLLECTOR PIN
2367-198

COLLECTOR SPRING
2321-135

COLLECTOR
MTG. SCREW
4-40 X 1/4 R.H.

ROLLER PIN
2328-96

ROLLER
2367-192

BRUSHPLATE SCREW
4-40 X 3/16 R.H.

BRUSHPLATE
2321-113

ARMATURE
2028-109

THRUST WASHER
671M-23

THRUST BEARING
681-121

ARMATURE BUSHING
2321-103

THRUST WASHER
671M-23

THRUST BEARING
681-121

RETAINING WASHER
671M-22

BRUSH SPRING
622-191

BRUSH
622-121

FIELD ASSEMBLY
NOT SOLD