

Extract the pins from these two locations and swap them. These are the PCB grounds for both the MUX board and the engine board.

