



**SERVICE MANUAL**

OTTP-95

**REVERSING UNIT ASSY.**

L.H. ZW-214  
 R.H. ZW-213


Right and left hand Reversing Unit Assemblies differ from each other in the location of contacts on the Contact Plate Assembly. For easier identification the edges of right hand contact plates are blackened while the edges of the left hand contact plates remain "natural".

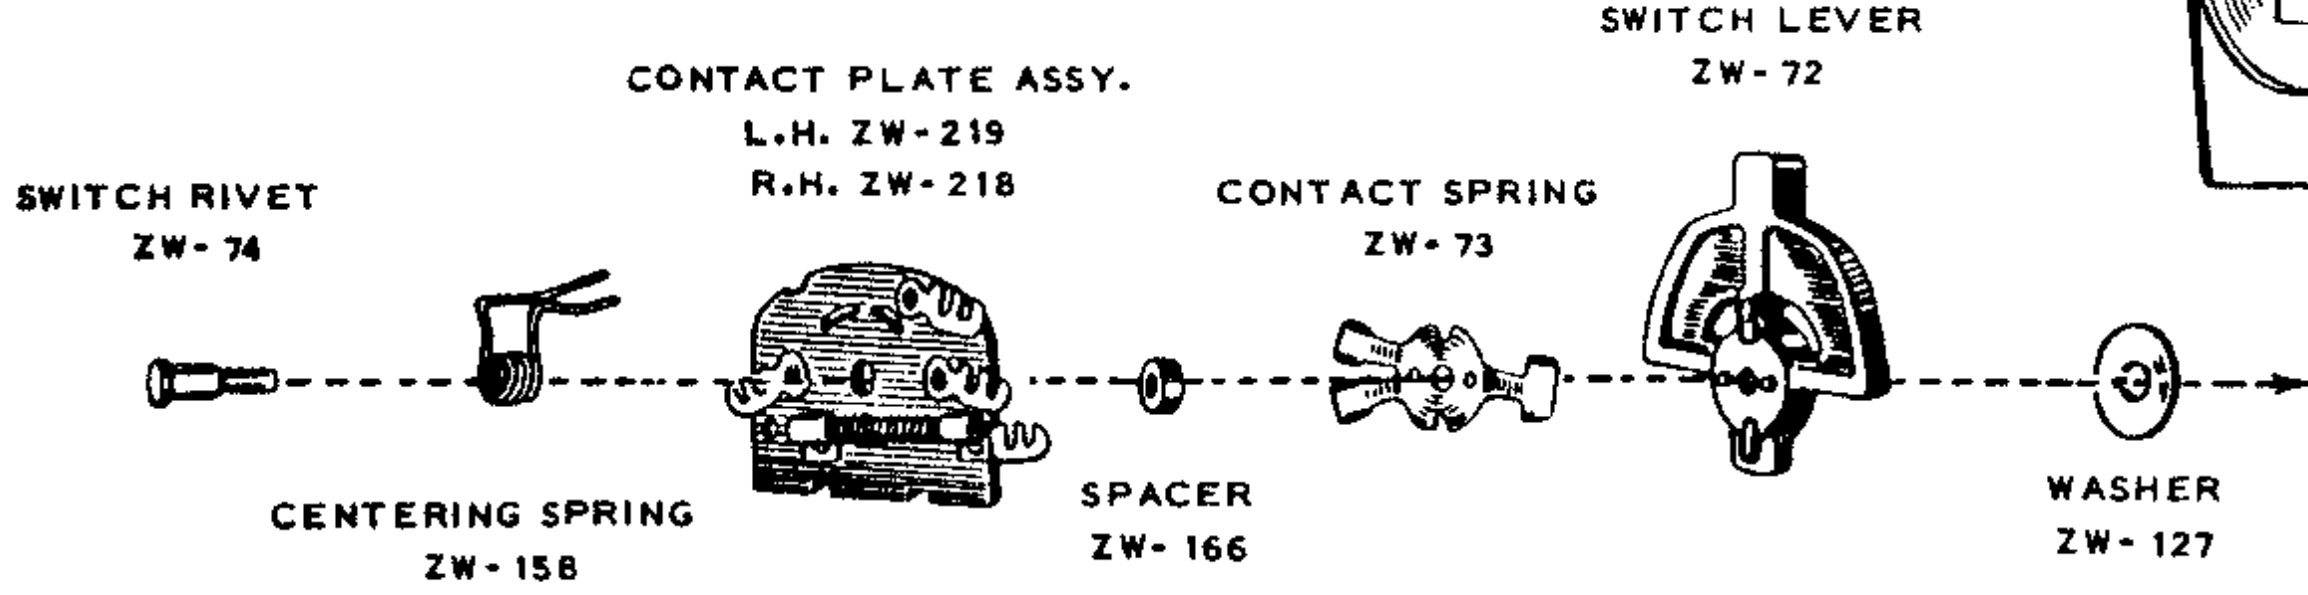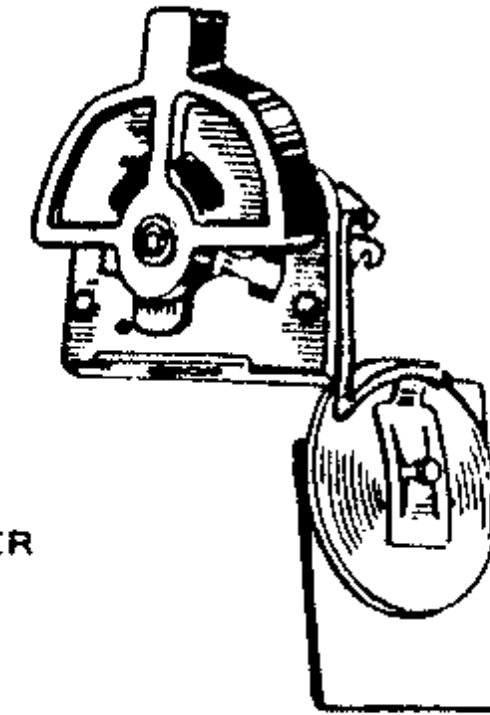

18 V. LAMP 1445-300 OR 6 V. LAMP 51-300

LAMP RESISTOR NO. ZW-183 IS USED ONLY WITH THE 6V. LAMP.

LAMP RESISTOR ZW-183

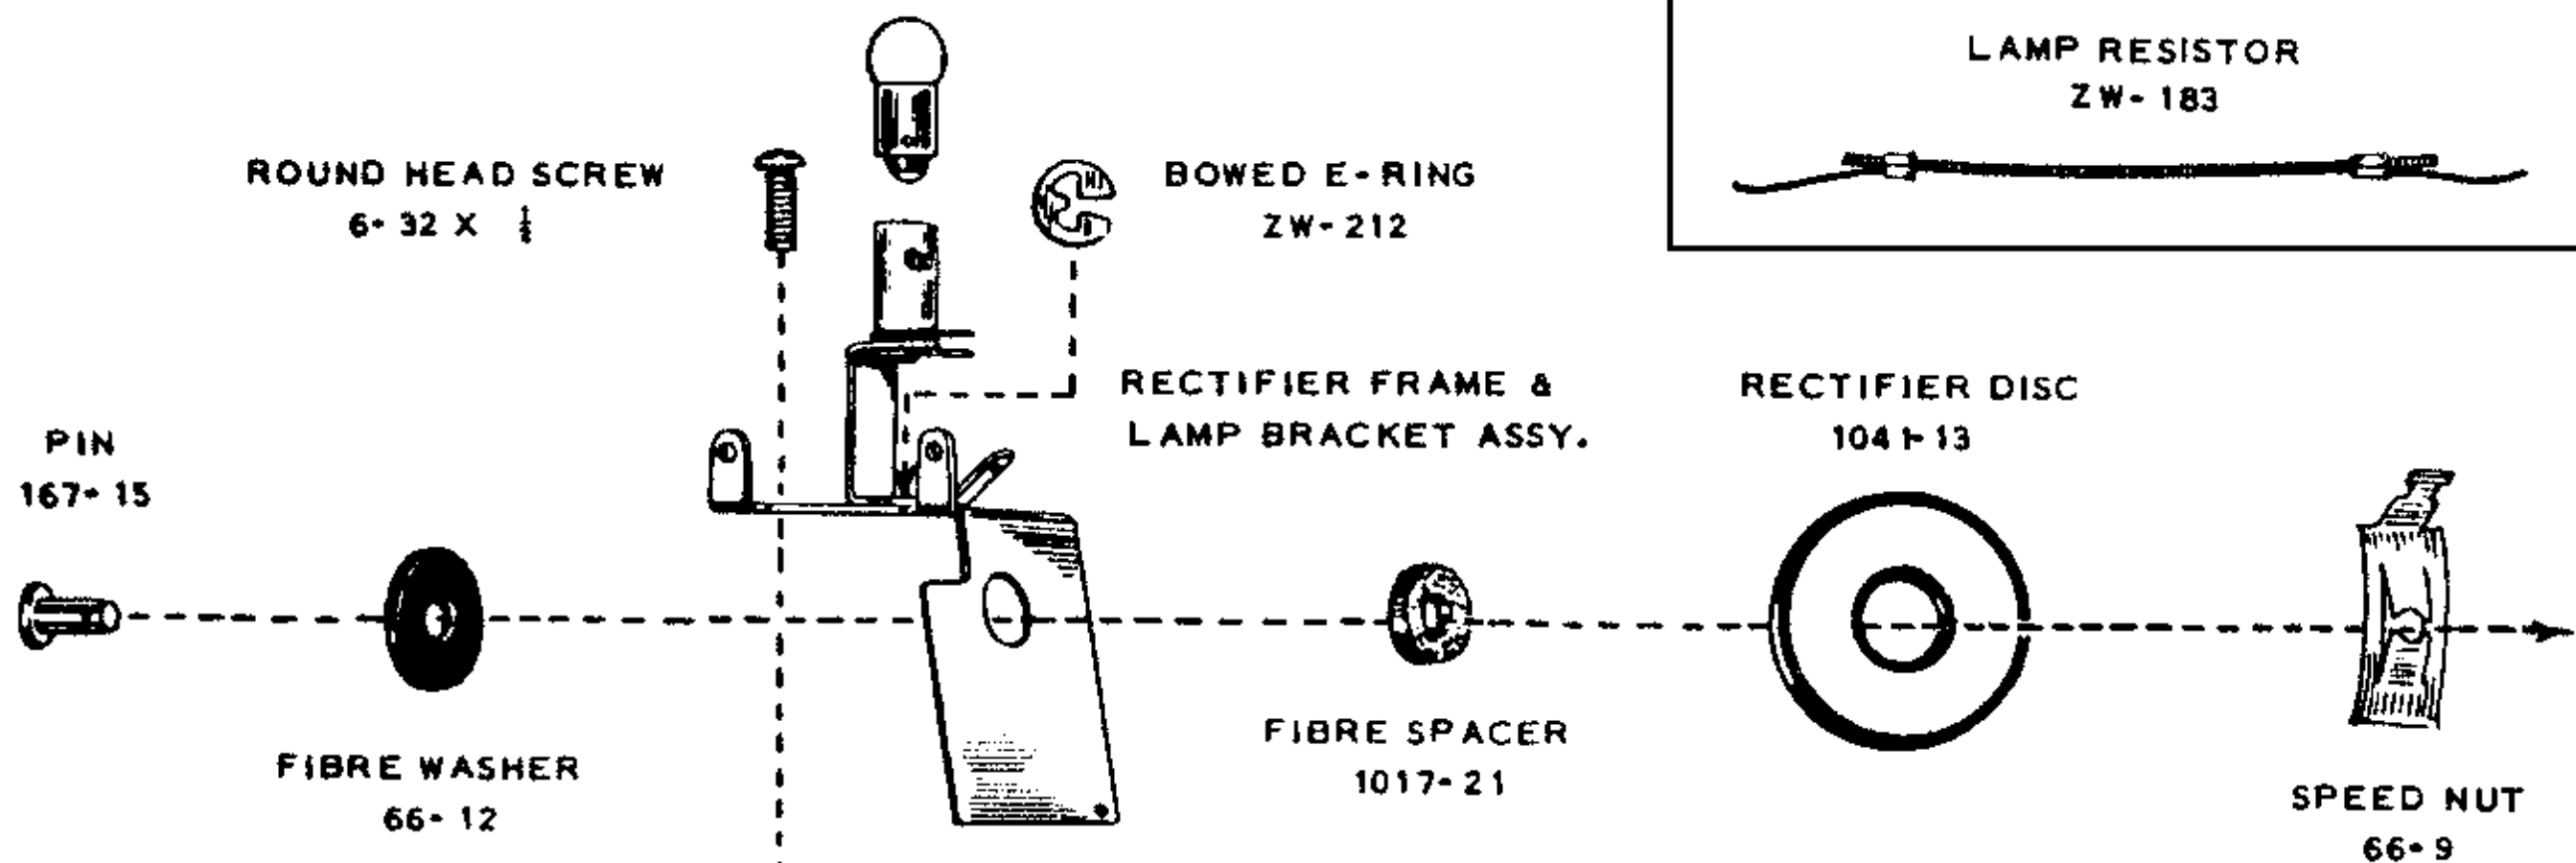

*Assemble speed nut onto copper side of rectifier*

TUBE INSULATION ZW-81

CONTACT SPRING INSULATION ZW-163

SELF TAPPING SCREW 6 X 1/2 R.H.S.T.Z.

CIRCUIT BREAKER ZW-232

SPRING CONTACT ZW-80