

LIONEL SERVICE MANUAL

NO. 0645W - WHISTLE TENDER

<u>Part No.</u>	<u>Bin</u>	<u>Description</u>	<u>List Price</u>
0645-63		Body	1.25
0625-90	E-62	Stud	.05
0625-85	E-62	Stud Washer	.02
0645-175	A-88	Reversing Unit	2.00
#4 x 3/16"	Q-54	BHI "Z" (Rev. Unit)	.02
0645-98	A-88	Bracket Screw	.05
0645-167		Rev. Unit Bracket	.40
0645-250	A-48	Motor	3.50
0645-260		Rectifier	.75
1011-19	N-51	Solder Lug (Rectifier)	.05
0645-261	A-88	Nylon Screw (Rectifier)	.05
0645-68		Impeller	.20
0645-69	A-98	Impeller Cover	.15
0645-67	A-88	Hex Nut (Cover)	.05
0645-90		Coal Pile	.30
0645-96	A-88	Plain Truck	1.00
0645-92	A-88	Collector Truck w/Coupler	1.50
0712-20	J-54	Collector Truck Spring	.05
0712-18	J-54	Truck Washer	.05
2/56 x 3/16"	Q-52	RHI (Plain Truck)	.02
0140-7	A-98	Shoulder Screw (Coupler Truck)	.05
0766-51	A-50	Coupler	.15
0766-55	A-50	Coupler Cover	.05

