


LuCI

LuCI is a web interface for your module. Think of it as a custom web page used exclusively for accessing advanced set up and features in your WIU unit. To operate Wi-Fi DCS, most people will not need to access LuCI. However, if MTH releases an update to your WIU firmware, you will want to meet her.

Accessing LuCI

1. Disconnect all cables from your WIU (power, TIU, ENET).
2. Set the **MTH/HOME** selector switch to **MTH**.
3. Plug the WIU into an AC wall outlet.
4. Using a smart device or Wi-Fi capable laptop/PC, navigate to see the available wireless networks and connect to the **MTH_DCS-XXXX**. The network name is printed on the bottom of your module.
5. When prompted, enter the network key **mthdcswifi** all lower case. The network key is also printed on the bottom of your module.
6. Open your web browser and enter the IP address **192.168.143.1** in the url address line. This is usually the top text box in your browser. This will open LuCI, the MTH DCS web interface.

Note: If your laptop is connected to the internet via your home network, it will attempt to load your home page and timeout. After the timeout, delete the url in the address line and type in 192.168.143.1 and hit enter.

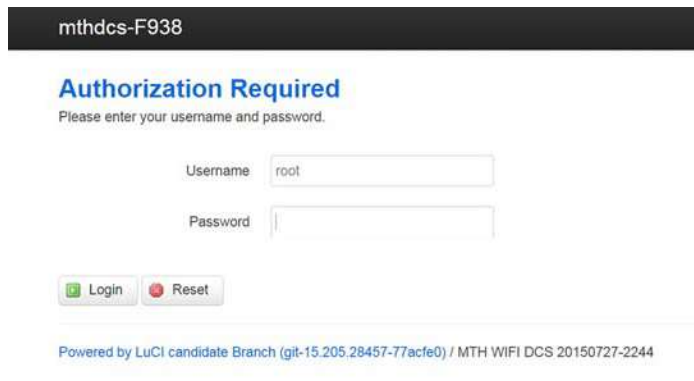

The screenshot shows a web browser window displaying the login page for 'mthdcs-F938'. The page has a black header with the text 'mthdcs-F938'. Below the header, the main content area has a white background. At the top of this area, it says 'Authorization Required' in blue, followed by 'Please enter your username and password.' in black. There are two input fields: 'Username' with the value 'root' and 'Password' which is empty. Below these fields are two buttons: 'Login' (green) and 'Reset' (red). At the bottom of the page, there is a small line of text: 'Powered by LuCI candidate Branch (git-15.205.28457-77acfe0) / MTH WIFI DCS 20150727-2244'.

7. Enter the password **mthdcs** and hit enter. Do not change the username from **ROOT**.

Note: The password is case-sensitive.