


Supplemental Service notes

Conventional Culvert Unloader

- Please follow wiring diagram on next page for hooking up power and ground to your Conventional Culvert Unloader. If the power is hooked-up improperly you could damage the PCB in the accessory rendering it inoperable.
- We also would like to note that the power should only be turned off when the magnetic lift assembly is in the up position.

Wiring Your Conventional Culvert Unloader Supplement

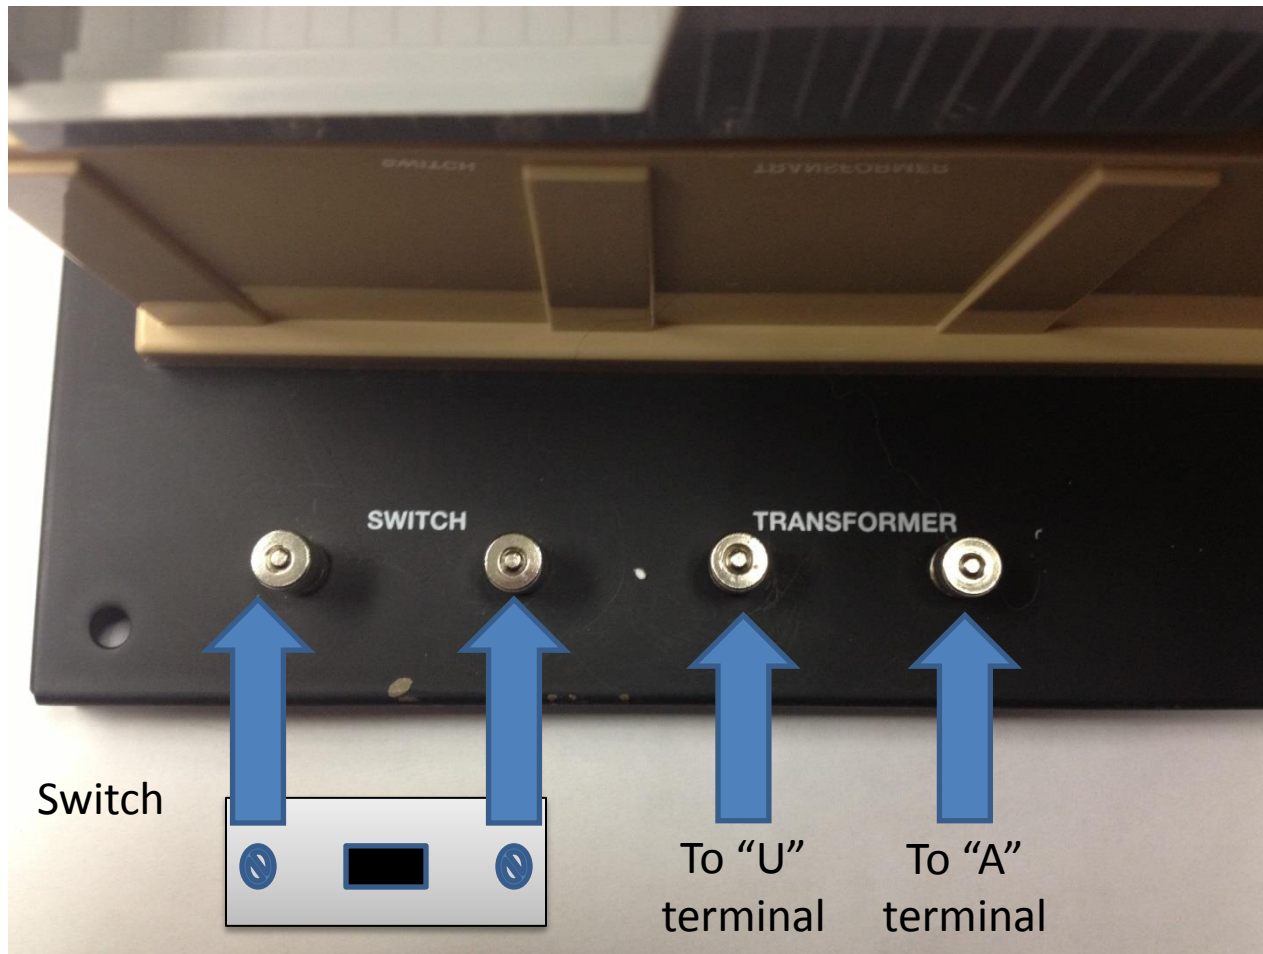

Please note this diagram supersedes the diagram on page two of the instructions!