


# T-1 TENDER

## 91-8006-T01 Reading


## 91-8011-T01 Chessie System


(Page 1 of 2)

Refer to drawing 91-8009-T01, L-3  
Tender, for plug and internal volume  
control parts used on  
91-8011-T01 Chessie System

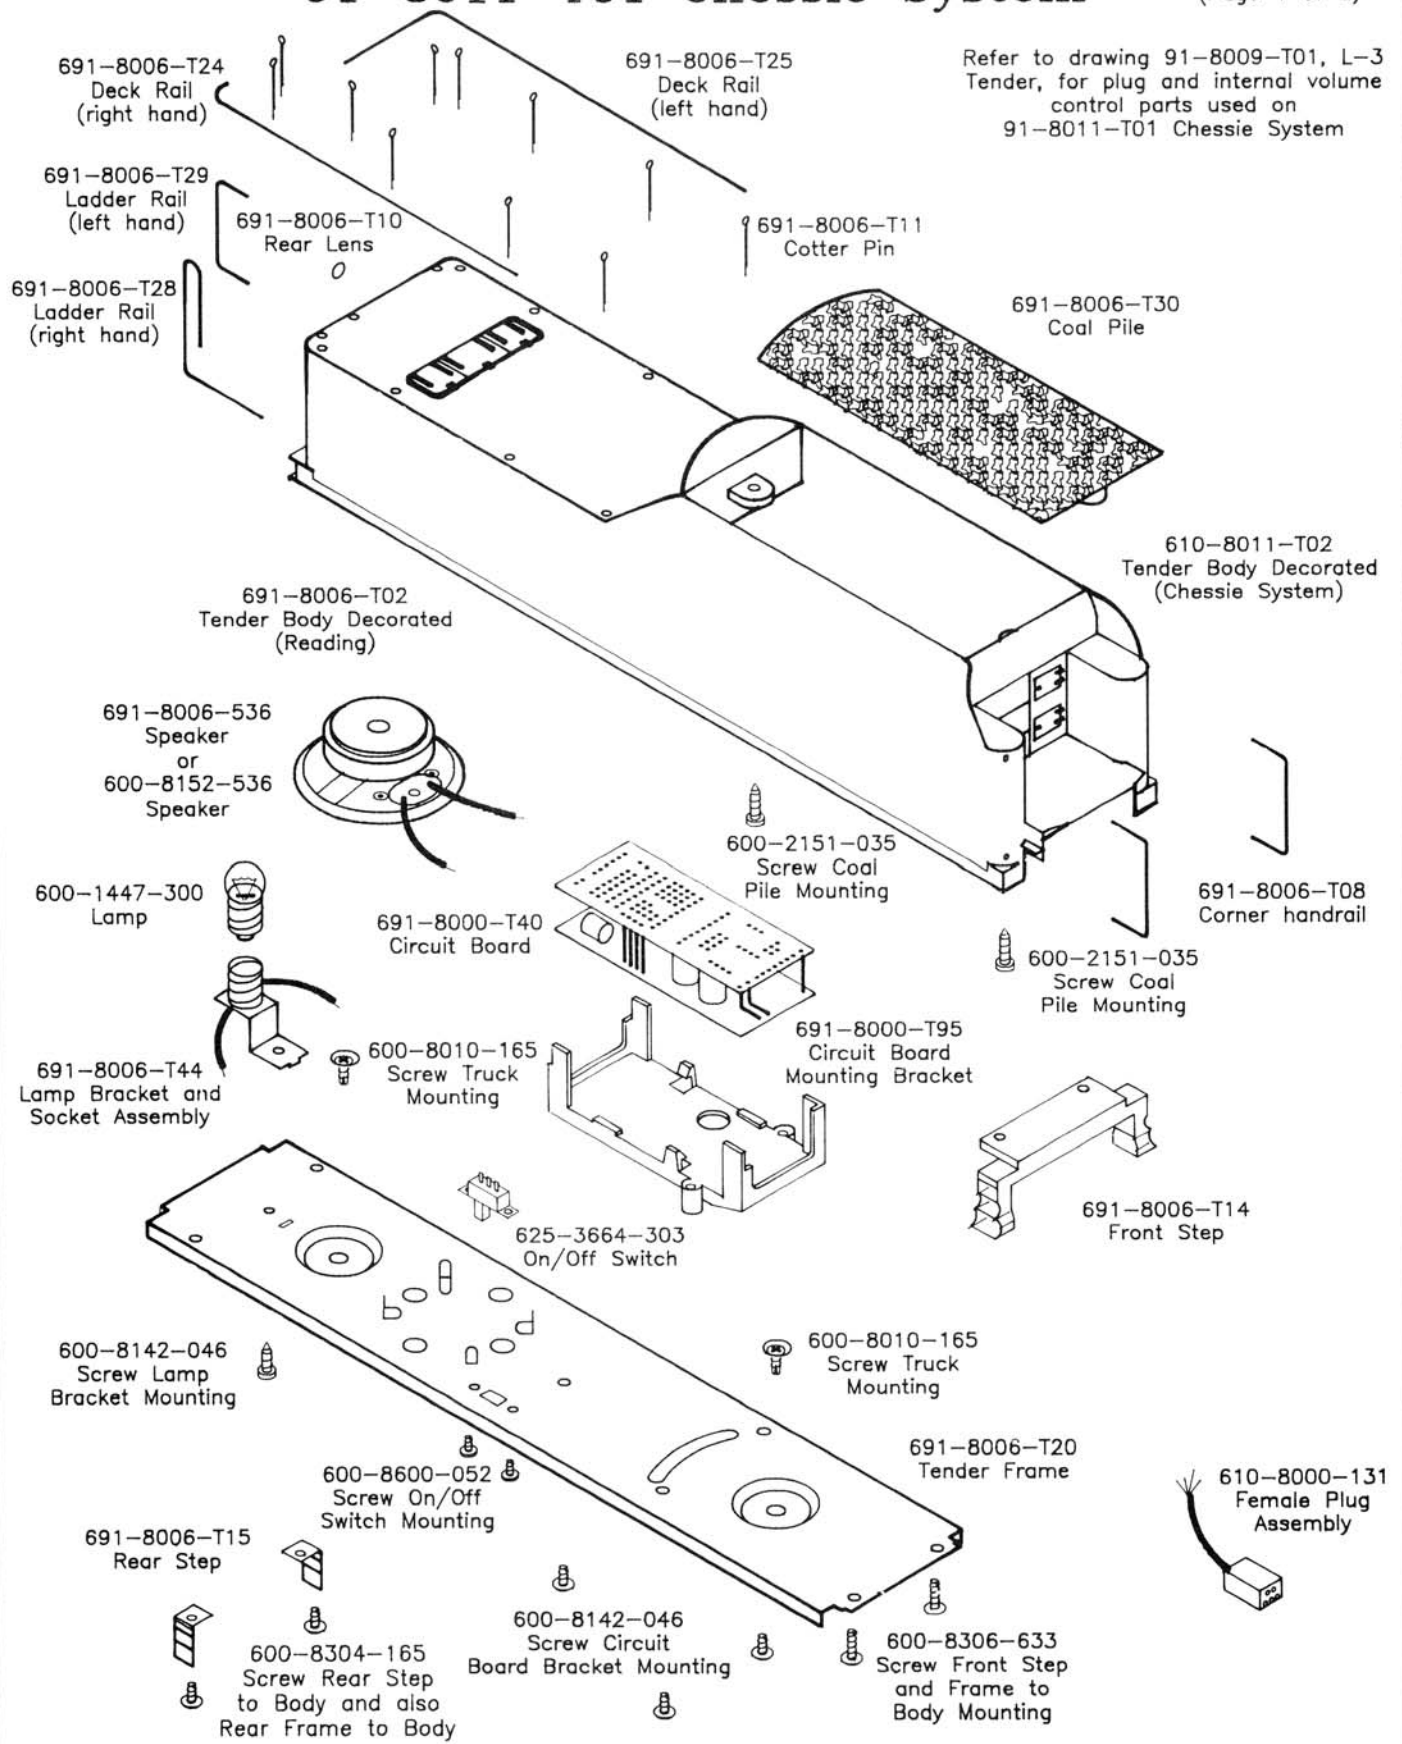


**T-1 TENDER**  
**91-8006-T01 Reading**  
**91-8011-T01 Chessie System**


600-9570-107  
 Washer Rear  
 Truck Mounting 

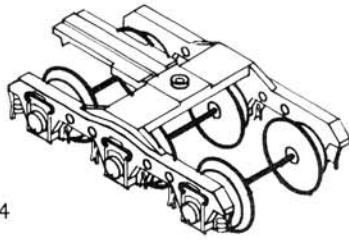


691-8006-T54  
 Rear Truck  
 Includes coupler

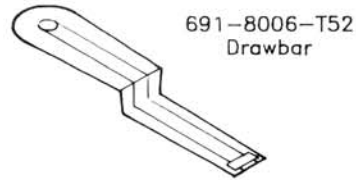

691-8006-T52  
 Drawbar

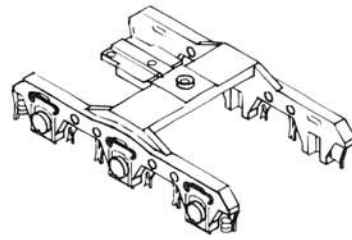


 
691-8006-T55  
 Truck Side


691-8000-T87  
 Sensor with Leads 

691-8006-T80  
 Sensor Bracket 

691-8006-T50  
 Front Truck Assembly  
 Includes wheel and axle  
 and sensor

600-0101-048  
 or  
 610-8006-042  
 Screw Sensor  
 Bracket Mounting 


691-8006-T70  
 Rear Coupler  
 Assembly 

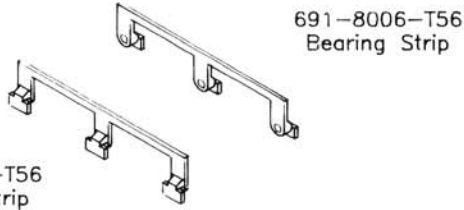

691-8006-T56  
 Bearing Strip

691-8006-T56  
 Bearing Strip


691-8006-T57  
 Coupler Armature  
 Assembly 

600-1615-093  
 Centering Spring 

691-8000-T54  
 Wheel and Axle  
 with Magnet



600-9050-054  
 Wheel and Axle

600-8960-052  
 Pal Nut 

600-9050-054  
 Wheel and Axle

691-8006-T70 Rear Coupler Assembly  
 Consists of:

- 691-8006-T86 Coupler Arm
- 691-00Tc-023 Knuckle Rivet or
- 690-00Tc-023 Knuckle Rivet
- 691-8006-T08 Knuckle
- 600-0480-016 Knuckle Spring