



Rectifier and capacitor are in LM2596 AC/DC  
 Buck converter, output voltage to suit motor  
 selected to move crane laterally

Title <b>Crane wiring</b>		
Author R.J.R.		
File _jments\fil\RR model\Designs\Crane relays V7.dsn	Document	
Revision 1.7	Date <b>2/1/2015</b>	Sheets 1 of 1