



MTH RS-3 Pickup Roller Binding Fix

Prevents engine from stalling or “bouncing” on uncoupler track magnet

Double pickup roller MTH part number BD-0000098. [Two Rollers - (8.0 x 10.8mm Roller) (33.2mm Long) (Silver base - 10.8 x 12.7mm), One screw hole]

- 1) Remove pickup roller by removing two screws. [1 & 2]
- 2) Take out both the pickup roller and the plastic insulating mounting piece. [3]
- 3) Replace the thick plastic insulating mounting piece with a piece of electrical tape [4]
- 4) The electrical tape can be placed directly in the truck mounting cavity over the full length of the cavity, or stuck to the pickup roller frame. Be sure the electrical tape is large enough to prevent the pickup roller from touching the truck housing when the roller is fully depressed
- 5) Screw the pickup roller back to the truck using the original screws [5]

6) Test that the pickup roller can be fully depressed into the truck frame.

