

TrainMaster Command Control operations

Reprogramming your locomotive to restore features

If your locomotive is unresponsive to your commands in the TrainMaster Command Control environment, we recommend that you follow this procedure to reset your locomotive. All factory default settings will be restored when you reprogram the locomotive.

1. Slide the Command reverse unit switch to the PROG position.
2. Plug in and connect your Command Base.
3. Place your locomotive and tender on the track, then power up the track.
4. Press **ENG** and enter the locomotive's ID#.
5. Press **SET**.
6. Press **ENG** and enter the locomotive's ID# again.
7. Press **AUX1**.
8. Enter **1** for this particular locomotive.
9. Turn off track power and wait ten seconds.
10. Slide the Command reverse unit switch back to the RUN position.

At this point, your locomotive has been reset. Restore power to the track and operate the locomotive as usual. Be sure to use the ID# entered in Step 4.