

# Solutions to Problems

## RESET

*Engine acts unpredictably, misbehaves*

1. Turn the power off for 3 seconds; listen for a "ding"
2. Turn the power back on.

The engine is in RESET. Interrupt the power to run the engine. If the engine still misbehaves, try a Hard RESET.



"ding"

## Hard RESET

1. Turn the power off for 15 seconds or more
2. Turn the power back on; listen for a triple "ding"

The engine is in RESET. Interrupt the power to run the engine. If the engine is not in RESET, turn off the power for 10 minutes, then turn the power back on.



"ding,  
ding,  
ding"

## All Select

*Engine acts dead*

1. Do a RESET (see above)
2. Press and hold the horn button
3. Listen for a "ding," continue to press the horn button
4. Release the horn button when the engine sounds begin

The engine is in RESET and is selected. Interrupt the power to run the engine.



"ding"

## Engine Unlock

*Engine is stuck in one direction, will not enter RESET*

1. While the engine is operating, press the horn button and release
2. Within 1 second, turn off the power for about 3 seconds

Listen for a "ding."

4. Turn the power back on

The engine is unlocked and in RESET. Interrupt the power to run the engine.



"ding"

