


# 02 PROTO-SCALE™

## Wheel Set Kits


### ADDENDUM

If you find loose fitting conductive axle bushings in the truck block or you find the model hesitates during operation, install shims to the conductive axle bushing to improve the conductivity and operation.

The kit comes with 0.1 mm and 0.03 mm thick shims as pictured below. In general one 0.1 mm shim per conductive axle bushing should resolve most conductivity problems. However, the 0.03 mm thick shims are included should you need more or less than one 0.1 mm thick shim. Each shim is easily removed from the holding rack with a slight twist.

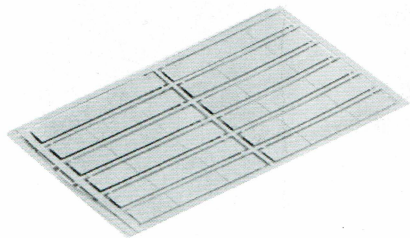

0.1mm Shim

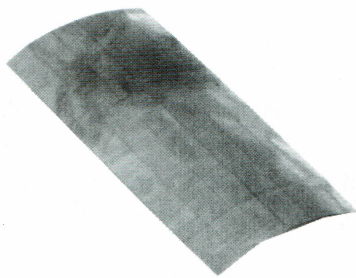

0.03mm Shim

