


AF 343/346 4-posi rev. unit wiring diagram

JH
 11/6/14
 11/7/14

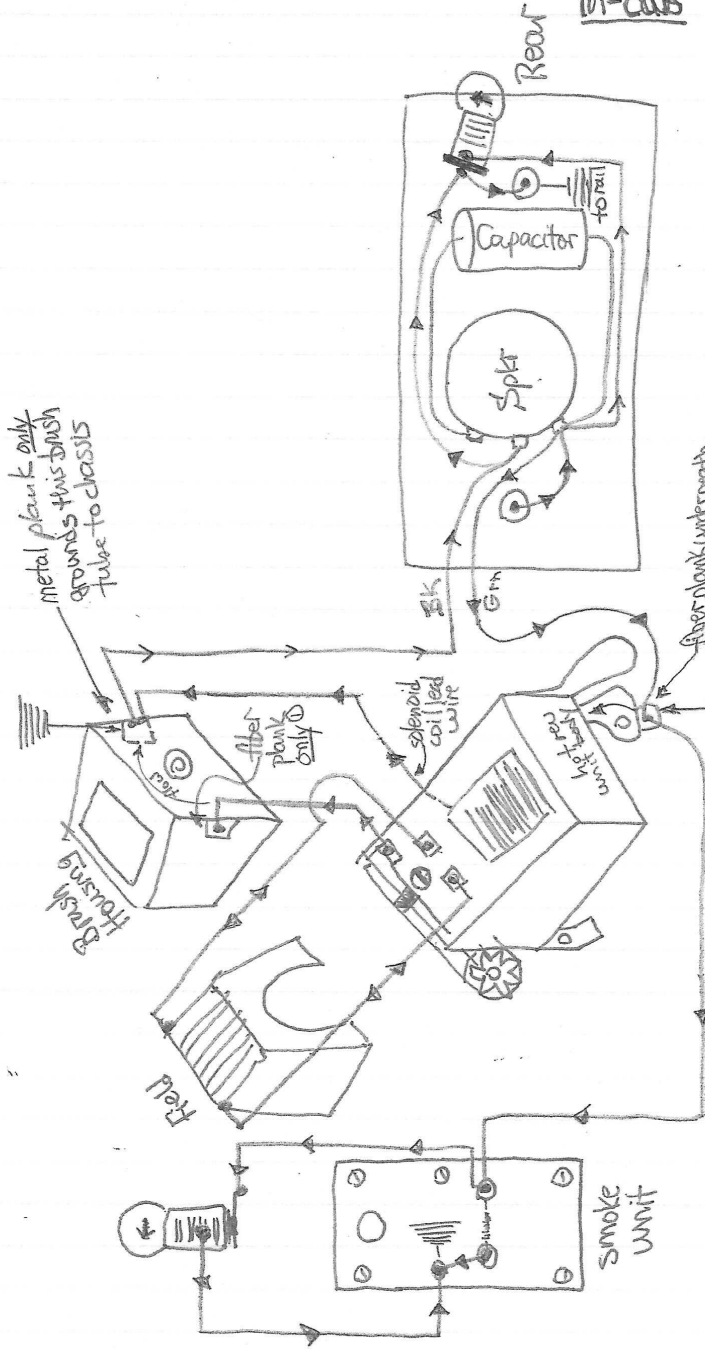

Based on Phil L.'s working 346.

★ Note:

- The chassis is live w/ connection to the rear truck.
- The reverse unit's body is live w/ connection to the front truck.

4-position
 in-cab
 reverse
 unit

AF 346 0-8-0

Tender w/ airline
 whistle

- metal loop (to which wires are soldered) needs to touch fiber plank
- fiber plank is needed to position rev. unit correctly away from brush housing to not crush solenoid coil when screw tightened.

⓪ insulate left brush tube from chassis