



CONTROLLING YOUR LAYOUT (continued)

OPTIONS

Entering Options

Entering Options is quick and easy with LEGACY equipped products because they include a custom Memory Module that enters all the Options automatically. See page 55 for more info.

Generic Steam and Diesel engine Memory modules are included with the LEGACY Control System to make it easy to enter the most amount of features for your existing TMCC engines. You will only need to enter the RailSounds type, road-name and road-number manually.

It is necessary to choose Options in the INFO menu to support some methods of addressing with the LIONEL LEGACY Control System. Options you can choose and enter into the system are outlined in this section. These options only need to be entered once.


Editing Options

All information such as Name and Road Number or Control Settings can be modified at any time by using the engine's ID# and pressing INFO.

The LEGACY System defaults to CAB-1 Mode for any engine or train until you designate otherwise by using a Memory Module or entering options manually.

CHANGE THE ENGINE ID#

To give your Engine a new ID#:

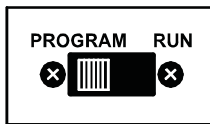

1. Make sure no other CABs are in use

2. Slide the engine's program/run switch to "Program"

3. Power down your track

4. Put the engine on the track.

5. Power up your track.


6. Press ENG on the remote

7. Enter a unique engine ID# 1 to 99

8. Press SET

9. The horn should blow, the headlight flash, or both. (The light will not flicker if it has the same ID# on LEGACY loco only)


10. Power down your track

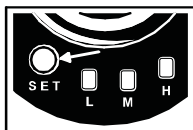

11. Take the engine off the track (if needed to access the Program/Run switch)

12. IMPORTANT!

Slide the engine's Program/Run switch back to "Run" right away



13. Put the engine on the track (if needed)

14. Power up your track

15. You are ready to operate

